

PIPER PARTS CATALOG

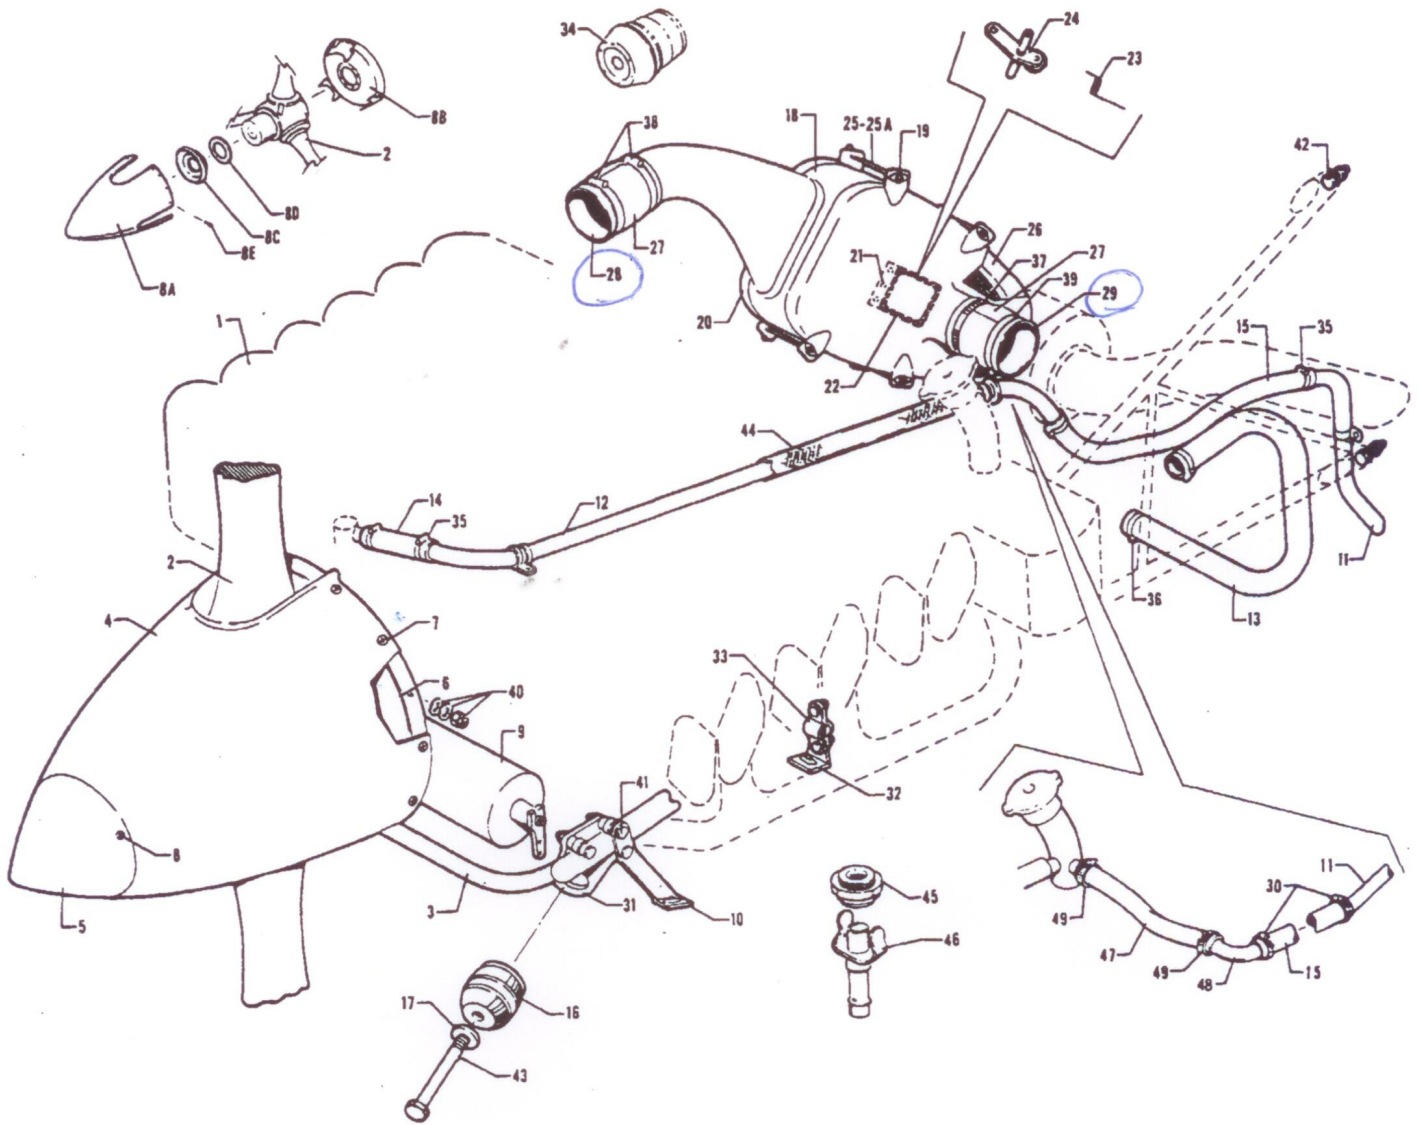


Figure 54 Power Plant Installation